## Leica Captivate SomarMite Configuration

SonarMite Echo Sounder Quick Guide

Step by Step Guide to configure a SonarMite echo sounder with a Leica GPS receiver and Captivate software

This Guide will walk you through the configuration to accept and record depths from the SonarMite via the Bluetooth connection.

When measuring a GPS position, the most recently received echo sounder depth will be recorded as an Annotation to that point.





Second Control Con					
<ul> <li>Regional</li> <li>Because the SonarMite units are in meters. Select Meter for distance units</li> <li>Secause the SonarMite units are in meters. Select Meter for distance units</li> <li>Secause the SonarMite units are in meters. Select Meter for distance units</li> <li>Secause the SonarMite units are in meters. Select Meter for distance units</li> <li>Regional</li> <li>Regional&lt;</li></ul>	🚱 LeicaCaptivate	×			
Distance       Select Meter for distance units         Select Meter for distance units         States decimal         <	☆ Regional	0 ID (0) 09:51		3.	Because the SonarMite units are in meters.
Distance devices Station format Area Wellwine New Page New Pa	Distance Slope Angle Time Coord	linates Language Others Device ID			Select Meter for distance units
Distance decimal	Distance	Meter (m) 🗸 🗸			
Station format  Area Area Area Area Area Area Area Are	Distance decimal	3			
Area       m'         Volume       Page         Image: Section of the	Station format	+123456.789 🗸			
Volume       m³         OK       Page         South Basing for CAD files       South	Area	m² ~			
OK       Page         Regional       Image: Im	Volume	m³ ~	]		
Image:					
OK Page     Regional     Regional     Regional     Regional     Regional     Select the Coordinates tab and verify the Grid   Format is Northing, Easting   Goodelic format     Select the Coordinates tab and verify the Grid   Format is Northing, Easting   Goodelic format     Select the Coordinates tab and verify the Grid   Format is Northing, Easting   Select the Coordinates tab and verify the Grid   Format is Northing, Easting   Select the Coordinates tab and verify the Grid   Format is Northing, Easting   Select the Coordinates tab and verify the Grid   Format is Northing, Easting Select the Coordinates tab and verify the Grid Format is Northing, Easting Select the Coordinates tab and verify the Grid Format is Northing, Easting Select the Coordinates tab and verify the Grid Format is Northing, Easting Select the Coordinates tab and verify the Grid Format is Northing, Easting Select the Coordinates tab and verify the Grid Format is Northing, Easting Select table Select Select Select Select Select Select Selections Select Connections Formation for the main menu Select Select Selections					
<ul> <li>Select the Coordinates tab and verify the Grid Format is Northing, Easting</li> <li>4. Select the Coordinates tab and verify the Grid Format is Northing, Easting</li> <li>4. Select the Coordinates tab and verify the Grid Format is Northing, Easting</li> <li>Settings</li> </ul>	ОК	Page			
• Regional • Regional • State Slope Angle Time Coordinates tab and verify the Grid Format is Northing, Easting • A. Select the Coordinates tab and verify the Grid Format is Northing, Easting • Source Coordinates tab and verify the Grid Format is Northing, Easting • Northing coardinates tab and verify the Grid Format is Northing, Easting • Northing coardinates tab and verify the Grid Format is Northing, Easting • Northing coardinates tab and verify the Grid Format is Northing, Easting • Northing coardinates tab and verify the Grid Format is Northing, Easting • Northing coardinates tab and verify the Grid Format is Northing, Easting • Northing coardinates tab and verify the Grid Format is Northing, Easting • Northing coardinates tab and verify the Grid Format is Northing, Easting • Northing coardinates tab and verify the Grid Format is Northing, Easting • Northing coardinates tab and verify the Grid Format is Northing, Easting • Northing coardinates tab and verify the Grid Format is Northing, Easting • Northing coardinates tab and verify the Grid Format is Northing, Easting • Northing coardinates tab and verify the Grid Format is Northing, Easting • Northing coardinates tab and verify the Grid Format is Northing, Easting • North table for the main menu Select Settings • North Easting •	LeicaCaptivate	×			
Distance Slope Angle Time <u>Coordinates</u> Language Others Device ID Grid format Geodetic format Latitude, longitude Switch Northing for CAD files b CK Page CK Page CK Page CK CK Page CK CK Page CK CK Page CK CK CK CK CK CK CK CK CK CK	└ Regional	₩ 0 0 1D @ ■ 0 0 1D	2 1 1	4.	Select the Coordinates tab and verify the Grid
Grid format Geodetic format Switch Easting for CAD files Switch Northing for CAD files C C C C C C C C C C C C C	Distance Slope Angle Time Coord	inates Language Others Device ID			Format is Northing, Easting
Geodetic format Switch Easting for CAD files U  C  C  C  C  C  C  C  C  C  C  C  C	Grid format	Northing, easting 🛛 🗸 🗸			
Switch Easting for CAD files Switch Northing for CAD files b CK CK Page CK CK CAD files b CK CK CK CK CK CAD files CK CK CK CAD files CK CK CAD files CK CK CAD files CK CK CAD files CK CK CK CK CK CK CK CK CK CK	Geodetic format	Latitude, longitude V	]		
Switch Northing for CAD files b OK Page Settings Setings Settings Settings Settings Settings Set	Switch Easting for CAD files				
OK       Page         Image: Comparison of the main menu Select Settings         Ima	Switch Northing for CAD files				
OK       Page         Image: Image		à			
OK       Page         Image: Static Captivate - Home       Image: Static Captivate - Home         Image: Static Captivate - Home       Image: Static Captivate - Home         Image: Static Captivate - Home       Image: Static Captivate - Home         Image: Static Captivate - Home       Image: Static Captivate - Home         Image: Static Captivate - Home       Image: Static Captivate - Home         Image: Static Captivate - Home       Image: Static Captivate - Home         Image: Static Captivate - Home       Image: Static Captivate - Home         Image: Static Captivate - Home       Image: Static Captivate - Home         Image: Static Captivate - Home       Image: Static Captivate - Home         Image: Static Captivate - Home       Image: Static Captivate - Home         Image: Static Captivate - Home       Image: Static Captivate - Home         Image: Static Captivate - Home       Image: Static Captivate - Home         Image: Static Captivate - Home       Image: Static Captivate - Home         Image: Static Captivate - Home       Image: Static Captivate - Home         Image: Static Captivate - Home       Image: Static Captivate - Home         Image: Static Captivate - Home       Image: Static Captivate - Home         Image: Static Captivate - Home       Image: Static Captivate - Home         Image: Static Captivate - Home       Image: Static Captivate -					
OK       Page         Image: Section of the s					
<ul> <li>From the main menu Select Settings</li> <li>From the main menu Select Settings</li> <li>Settings</li> <li>Setings</li> <li>Settings</li> <li>Setings</li> <li>Set</li></ul>	ОК	Page			
<ul> <li>From the main menu Select Settings</li> <li>From the main menu Select Settings</li> <li>From the main menu Select Settings</li> <li>Sonamite</li>     &lt;</ul>					
5. From the main menu Select Settings	Eleccaptivate	= · · · ×	>	_	
Image: Set ings   Set ings Image: Set ings I	Eleca Captivate - Home	0 10 Q	2	5.	From the main menu Select Settings
Image: Shine Since			•		
ON2 SH1A   Sonarmite To K Develope Cocce integration of the static	P	P P	t.		
ON 2 SH1A   Sonarmite     Static2     Settings   Sonarmite   Sonarmite   Sonarmite Sonarmi					
Sonarmite Sonarmite Settings D viewer Fn OK Neasure COGO Stake points To Settings Connections	DON 2 SH1A	static2 STK			
Image: Constructions   Image: Constructions Image: Construction		onarmite			
Settings 3D viewer Measure COGO Stake points Fr OK Commections Connections					
Settings 3D viewer   Measure COGO   Stake points   Fn OK   OK      Image: Connections   Fn OK   Image: Connections   Fn OK   Image: Connections   Fn OK   Image: Connections   Fn OK   Image: Connections   Fn OK   Image: Connections   Fn OK   Image: Connections   Fn OK   Image: Connections   Fn OK   Image: Connections   Fn OK   Image: Connections   Fn OK   Image: Connections   Fn OK   Image: Connections   Fn OK   Image: Connections   Fn OK   Image: Connections   Fn OK   Image: Connections   Fn OK Fn		○			
Fn OK     Image: Connections	Settings 3D viewer	Measure COGO Stake points			
<ul> <li>Settings</li> <li>Settings&lt;</li></ul>	Fn OK 🗟	Jobs Fr	n		
<ul> <li>Settings</li> <li>Set</li></ul>	DeicaCaptivate	×			
1 1   Connections GS Sensor   GS Sensor Point storage     Point storage     Image: Customization   Customization     Tools     Fn     OK     Fn     Image: Customization     Image	5 Settings	₩ 2D @		6.	Select Connections
T     F       Connections     GS Sensor       Point storage       Point storage       Point storage       Customization       System       Tools		<b>2 3</b>			
Connections     GS Sensor     Point storage       Image: Connections     Image: Connections     Image: Connections       Image: Connections     Image: Connections </td <td>NIN</td> <td>T 📃</td> <td></td> <td></td> <td></td>	NIN	T 📃			
Image: state of the state o	Connections	GS Sensor Point storage			
Image: Customization     Image: System       Image: Customization     System       Image: Customization<	<u> </u>  † 4	5 🎽 6			
Image: Customated in the system     Image: Customated in the system       Image: Customated in the system     Image: Customated in the system       Image: Customated in the system     Image: Customated in the system       Image: Customated in the system     Image: Customated in the system       Image: Customated in the system     Image: Customated in the system       Image: Customated in the system     Image: Customated in the system       Image: Customated in the system     Image: Customated in the system	+   T	Suctom Tools			
About Leica Captivate	Customization	System 100IS	ł.		
About Leica Captivate					
En OK	About Leica Captivate				
	Fn OK	Fr	n		

































	11:21 II.21	<b>35.</b> Selelct the SonarMite Format file we transfered to
ob	Sonarmite	the internal memory earlier Select OK
ormat file	SonarMite.FRT >	
To device	Internal memory V	
Output file	Sonarmite txt	
n OK	Fn	
		36.
		37.
		38.

